


MËX

vacio

VS505

MËX
vacio
VS505

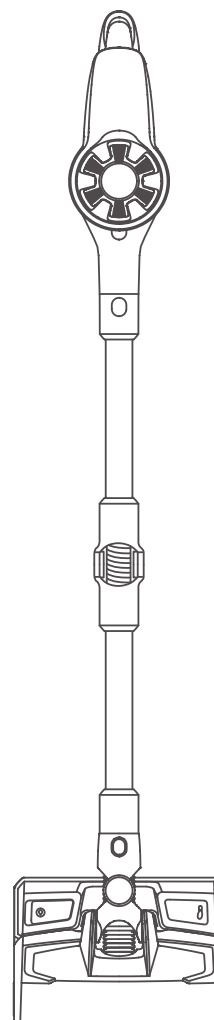

INSTRUCTION MANUAL
Cordless Vacuum Cleaner

คู่มือการใช้งาน
เครื่องดูดฝุ่นไร้สาย

Read instruction manual before use.
โปรดอ่านคู่มือทุกครั้งก่อนการใช้งาน

CONTENTS

SAFETY PRECAUTION	E-1
PARTS AND ACCESSORIES	E-3
VACUUM CLEANER ASSEMBLING	E-4
ACCESSORIES	E-5
ACCESSORIES ASSEMBLING	E-6
INSTRUCTION FOR USE	E-8
On/Off Operation	E-8
Battery Charging	E-8
Water Tank Assembling	E-9
Disassembling for Cleaning	E-10
TROUBLE SHOOTING	E-11
SPECIFICATION	E-12
PACKING LIST	E-12

SAFETY PRECAUTION

WARNING

Read all the instructions and only use the appliances for its intended purpose.

Children should be supervised to ensure that they don't play with the appliances.

This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

DANGER

DO NOT

- Do not use this appliance to vacuum the following:-
 - Water, moist objects, liquids, ashes, lighted cigarette ends, etc.
 - Inflammable, combustible substances, or anything that is burning or smoking.
 - Toxic substances, e.g. cleaser, chlorine, ammonia, etc.
 - Toner of laser printer or copier. It may make explosion or fire.
 - Plastic pellets, cement, etc. to prevent clogging.
- Do not use without dust cup and filters in place.
- Do not store the appliance in heat place.
- Do not use this appliance to vacuum hard pointed objects, large objects, etc. It may make damage to the appliance.
- Do not use the appliances outdoors.
- To prevent the reduction in air flow, ensure that all orifices/vents on the appliance are kept free from blockages and do not insert any objects into these orifices/vents.

WARNING

Store package (including plastic bag) away from childrens for safety reasons.

Read all the instructions from this instruction manual only.

Store the power cord gently without pull forcing.

Store the power cord away from heat sources.

Extra care to keep hair, cloths, and part of the body away from the tube.

Switch off the appliance before plugging and unplugging from the socket.

Remove dust from the dust cup regularly to maintain efficiency.

Do not close the door over the power cord. Do not place the power cord near sharp objects.

Do not operate the appliance with a damaged power cord or plug. Call customer service center or authorised dealer for consulting.

Do not handle the plug with wet hands.

Verify power supply is correct to specification of the appliance.

Do not use the appliance, if there is abnormal noise, smell, smoke during operation. Call customer service center or authorised dealer for consulting.

Assembly the product completely, before plugging.


Clean before use again, if there is clogging in any parts.

Keep the appliance in indoor and dry only. Store the appliance away from high heat sources.




Extra care should be taken when vacuuming staircases or inflammable area.

Always remove the plug from the socket, after use or before attempting any form if maintenance or cleaning.

PARTS AND ACCESSORIES

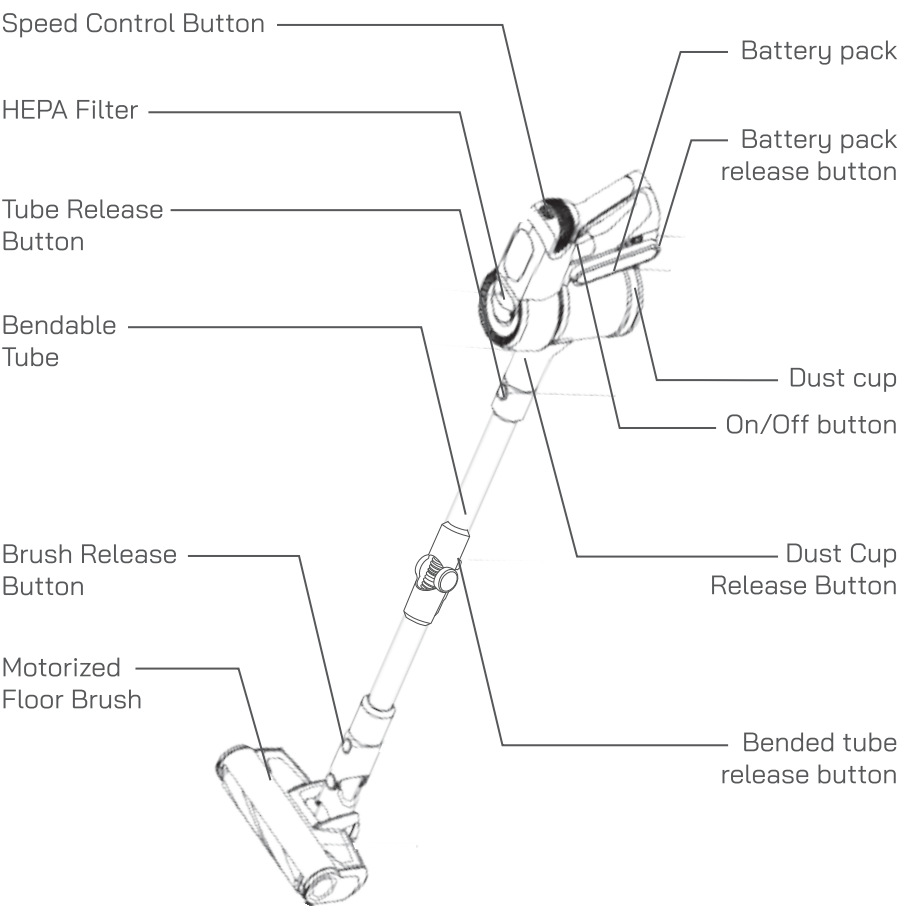


ACCESSORIES

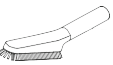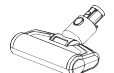  2-in-1 Crevice Brush	 2-in-1 Upholstery Brush	 Soft Brush	 Motorized Mite Brush	
 Connector	 Extension Hose	 Hanger	 Adaptor	 Water Tank Mop

VACUUM CLEANER ASSEMBLING

1. Assembly motorized floor brush to bendable tube
2. Assembly battery pack to the handheld vacuum cleaner
3. Assembly the handheld vacuum cleaner from no. 2 to bendable tube from no. 1

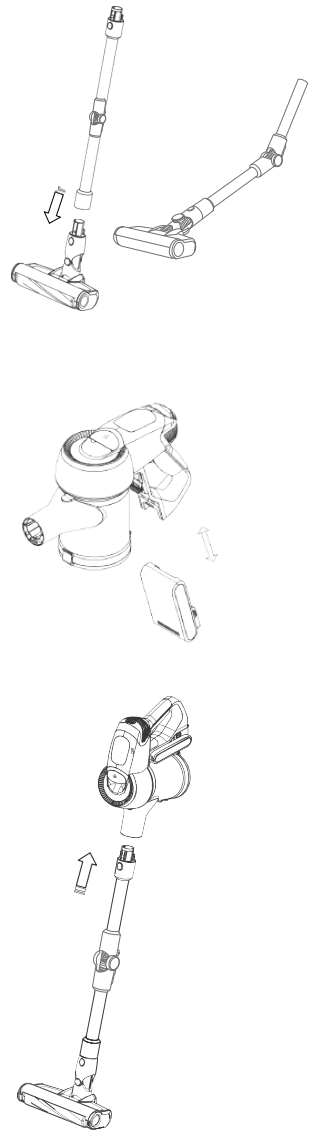

4. Start to use

ACCESSORIES ASSEMBLING

Accessories can be connected to ONLY handheld unit.
Extension hose, handle, and connector is applicable,
if required.




 

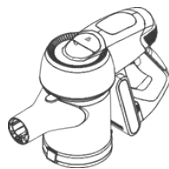



Illustration	Accessories Name	Suitable for
	2-in-1 Crevice Brush	To clean crevices, doors, windows, dead corners, and other narrow areas.
	2-in-1 Upholstery Brush	To clean dust on closet, sofa, windows, car seats, including table surface, etc.
	Soft Brush	To clean dust on book shelves, curtains, and sofa, etc.
	Motorized Mite Brush	To remove mite on mattress, pillow, and sofa, etc.
	Extension Hose	To clean hard to reach areas.
	Connector	To connect various brush with tube.
	Water Tank Mop	To mop with water together with vacuum.

ACCESSORIES ASSEMBLING


DIRECT ASSEMBLING

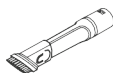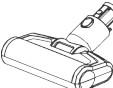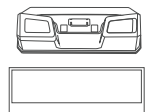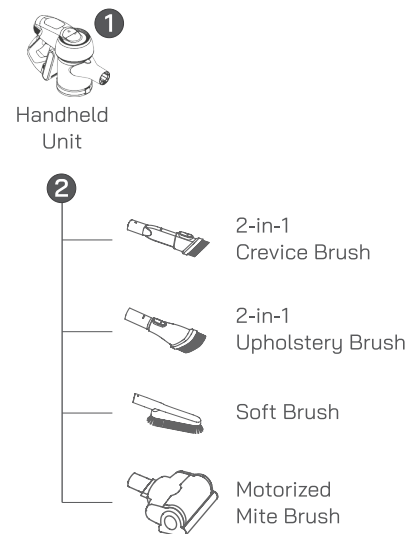


ASSEMBLING SAMPLE

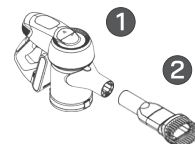


ASSEMBLING WITH EXTENSION HOSE

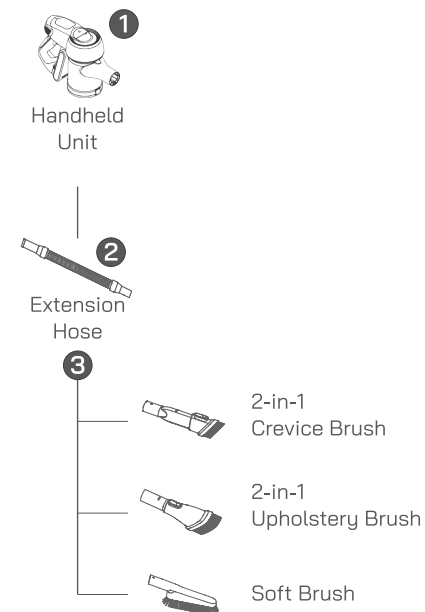


ASSEMBLING SAMPLE

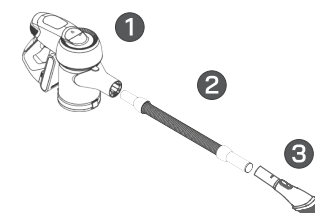


ASSEMBLING WITH BENDABLE TUBE

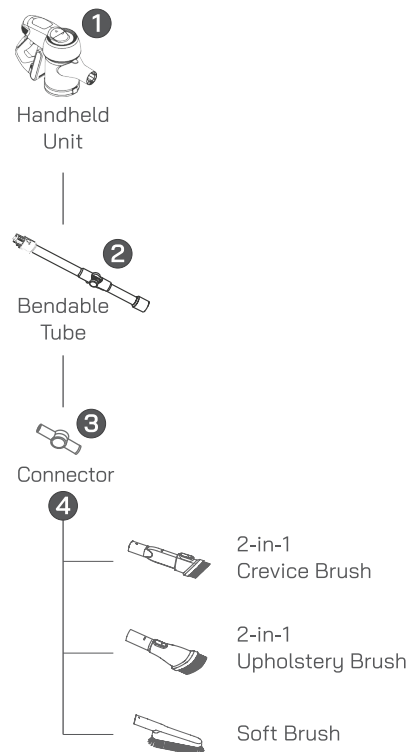


ASSEMBLING SAMPLE

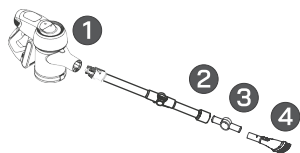

ASSEMBLING WITH EXTENSION HOSE AND CONNECTOR

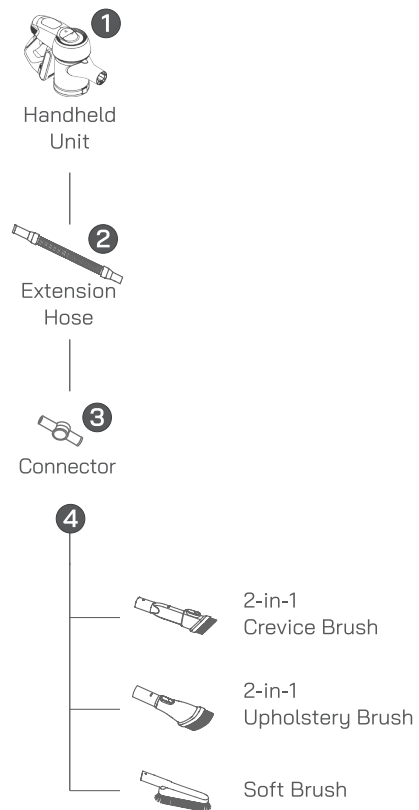


ASSEMBLING SAMPLE

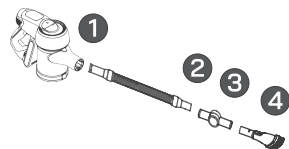

INSTRUCTION FOR USE

ON/OFF OPERATION

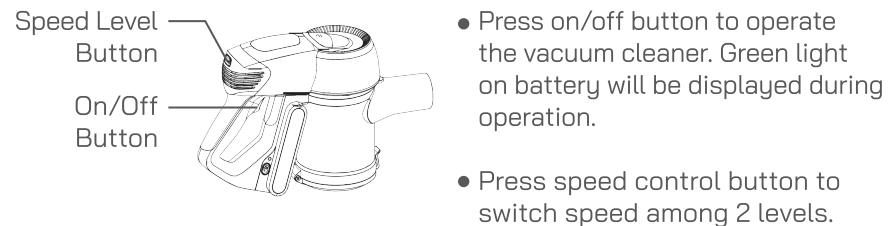

BATTERY CHARGING

Battery can be charged in 2 methods.

Remove battery from handheld unit.		Red indicator on battery will be shown during charging.
Battery has assembly in handheld unit.		Green indicator will be shown, after fully charged. Fully charge duration need 4-5 hours.

 
! ADVICES ON BATTERY

- Charge battery, if battery is low, to prolong battery life.
- Extend to charge battery by 30 mins to an hour after fully charged to prolong battery life.
- Unplug adapter after fully charged.

WATER TANK ASSEMBLING

Assembly water tank to motorized floor brush directly.


Align latch together.




Water inlet
for cleaning



Step on water release
button to release water for
cleaning. Step on again
to stop releasing water.

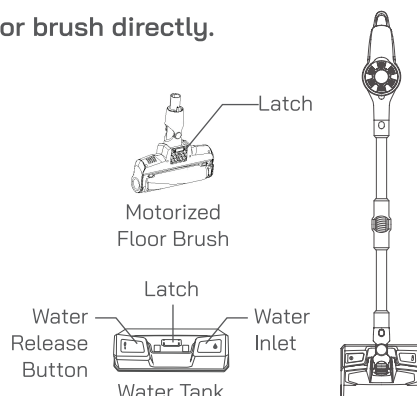


Water Release Button Position

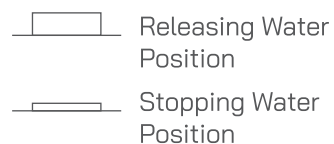

ADVICES ON WATER TANK USAGE

- To prevent damage, never put wax, oil, floor maintenance products or liquid floor cleaners that are not water-dilutable in the water tank.
- Empty and rinse the water tank after used.
- Do not use the water tank to clean carpets.
- Only use the water tank on hard floors with a water-resistant top coat.

HANGER INSTALLATION

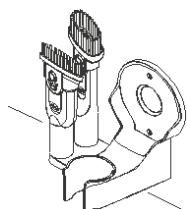



Fix hanger on the stable wall.

DISASSEMBLING FOR CLEANING



ADVICES ON CLEANING

- **EVERY PARTS MUST BE DRIED BEFORE REASSEMBLY.**
- Clean the dust cup after use every time.
- Clean the roller brush after long use to keep operation efficiency.
- Clean the dust cup and HEPA filter periodically. Please change, if they are clogged. Supplied can be order from customer service center or authorized dealers.

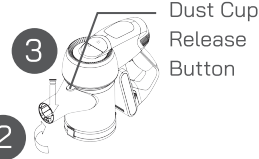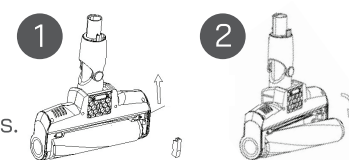Purposes	Procedures
To remove dust from the dust cup	1. Press dust cup cover button to open 2. Remove dust 
To remove dust cup for cleaning	1. Press dust cup release button 2. Turn the dust cup counterclockwise 3. Pull down the dust cup 4. Clean the dust cup with water 
To clean the handheld unit	1. Remove filters from the handheld unit. 2. Clean 
To clean HEPA filter	1. Open HEPA filter cover 2. Remove the filter 3. Remove dust and clean with water 
To clean motorized brush roller	1. Press brush roller release button 2. Remove brush roller 3. Remove hair and others. Clean with water. 

TROUBLESHOOTING

Symptoms	Possible Causes	Solutions
Motor is not working	Battery is empty.	Recharge battery.
	Battery pack isn't attached firmly	Remove battery pack and reassembly.
Low suction	Dust cup is full.	Empty dust cup.
	HEPA filter is blocked by dust.	Clean or replace HEPA.
	Floor head hose or brushroll is entangled with hair.	Clean the floorhead.
No charging indicator shows during charging	The vacuum cleaner doesn't connected the correct adapter and cord.	Use the correct adapter and cord.
	The connector is not connected correctly to the charging socket or the adapter is not inserted into the wall socket properly.	Make sure the connector is connected properly to the charging socket and the adapter is inserted into the wall socket properly.
Run operation duration is short.	Battery is not fully charged.	Charge battery until fully charge.
	Battery is deteriorated.	Replace new battery.

If problem is still exist, please contact to customer contact center
Tel +66 2 817 8999 or authorized dealers.

SPECIFICATION

Product	Vacuum Cleaner
Model	VACIO VS505
Rated Voltage	21.6 Volts
Rated Power	410 Watts
Adaptor Input Voltage	100-240 V 50/60 Hz
Adaptor Output Voltage	25 V +/- 0.2 V / 600 mA +/- 30 mA
Battery	Li-Ion

PACKING LIST

Handheld Vacuum Cleaner	1 Pc.	2-in-1 Crevice Tool	1 Pc.
Motorized Brush	1 Pc.	2-in-1 Upholstery Tool	1 Pc.
Bendable Tube	1 Pc.	Soft Brush	1 Pc.
Adaptor	1 Pc.	Motorized Mite Head	1 Pc.
Hanger	1 Pc.	Extension Hose	1 Pc.
Battery	1 Pc.	Connector	1 Pc.
Instruction Manual	1 Book	Water Tank	1 Pc.
		Mop	1 Pc.

MEMO

PEN K SERVICE CENTER
Tel +66 2 817 8999

66/3 Suksawat 76 Road. Bangchak.
Phra Pradaeng. Samutprakan 10130
THAILAND

e-mail: service2@penk.co.th
www.mexappliance.com